



INSTALLATION INSTRUCTIONS FOR 16" FOOTINGPAD[®]

***TOTAL ALLOWABLE LOAD for 16" FootingPad[®] is 4,167 pounds
(based on 3,000 psf soil capacity).***

NOTE: The posts' location and spacing (minimum 4"x4" post) is to be determined by the structure's load requirements and local soil capacity.

1. Dig the post hole slightly larger than 16" in diameter, and deep enough to be below the local frost line.
2. Level the bottom of the hole with a shovel, pea gravel, etc.
3. Place the FootingPad[®] into the hole smooth side down.
4. Position the post onto the pad at the required location.
5. Replace the dirt around the post and compact.